

# SURFACE PREPARATION




## **NEW MASONRY**

- Let dry for 14 to 28 days before painting.
- Apply Boysen Masonry Neutralizer #44 (1 part : 16 parts water) by brush.
- Let dry overnight.
- Sand surface to remove white crystals.



## **MASONRY REPAINTING**

- Remove loose and scaling paint.
- For chalking old latex paint, use Boysen Masonry Surface Conditioner #304.
- Treat any mould or fungus infestation with a fungicidal wash solution or household bleach solution (1:3).

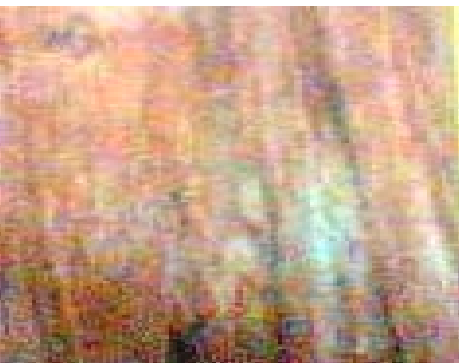

## **WOOD**

- Use only kiln dried (12 % moisture ) wood.
- If wood is stained, seal using Boysen Sanding Sealer #1254.
- Sand rough wood until smooth.
- Countersink nailheads for putty application.
- Dust off surfaces completely and wipe with clean rag.



# PAINTING SCHEDULE



## **Primer :**

For masonry / drywall

Boysen Permacoat Latex Flat #701

For wood

Boysen Flatwall Enamel #800

## **Putty :**

For masonry / drywall

Boysen Masonry Putty #7311

For gypsum boards

Boysen Gypsum Joint Compound #

For wood

Boysen Plasolux Glazing Putty #311

**Spot prime puttied portions, then...**

**Topcoat :**

Finish with at least two (2) coats of

**Virtuoso™ Silk Touch™**



**Virtuoso**  
Classic Products  
SILK TOUCH